

Kramer Electronics, Ltd.



USER MANUAL

Models:

RC-80, *Remote Control*

RC-160, *Remote Control*

RC-160L, *Remote Control*

Contents

1	Introduction	1
2	Getting Started	1
2.1	Quick Start	1
3	Overview	2
3.1	Terminology Used in this User Manual	4
4	Your RC-80, RC-160 and RC-160L Remote Control Machines	4
5	Installing in a Rack	9
6	Connecting the Remote Control Machine	10
6.1	Connecting the Remote Control Rear Panel	11
6.1.1	Connecting via RS-232	13
6.2	Controlling via ETHERNET	13
6.2.1	Connecting the ETHERNET Port directly to a PC (Crossover Cable)	13
6.2.2	Connecting the ETHERNET Port via a Network Hub (Straight-Through Cable)	14
6.3	Configuring the Ethernet Port	15
6.4	Controlling via RS-485	15
6.5	Setting the DIP-switches	16
7	Operating the Remote Control Machine	18
7.1	Reading the Display	18
7.1.1	Viewing the Current Status	18
7.2	Switching OUT-IN Combinations	19
7.3	Confirming Settings	20
7.3.1	Toggling between the At Once and Confirm Modes	20
7.4	Choosing the Audio-Follow-Video or Breakaway Option	21
7.4.1	Setting the Audio-Follow-Video Option	21
7.4.2	Setting the Breakaway Option	21
7.5	Locking the Front Panel	21
8	Flash Memory Upgrade	22
8.1	Downloading from the Internet	22
8.2	Connecting the PC to the RS-232 IN Port	22
8.3	Upgrading Firmware	23
9	Technical Specifications	24
10	Kramer Protocol 2000	25

Figures

Figure 1: RC-80 Remote Control	5
Figure 2: RC-160 Remote Control	6
Figure 3: RC-160L Remote Control	7
Figure 4: Connecting the RC-160 Remote Control	12
Figure 5: Connecting a Device without using a Null-modem Adapter	13
Figure 6: Local Area Connection Properties Window	14
Figure 7: Internet Protocol (TCP/IP) Properties Window	14
Figure 8: Controlling via RS-485	16
Figure 9: RC-160 DIP-switches	16
Figure 10: RC-160 Display	18
Figure 11: The JTG Sender Window	23

Tables

Table 1: Terminology Used in this User Manual	4
Table 2: Front Panel RC-80/RC-160/RC-160L Remote Control Features	8
Table 3: Rear Panel RC-80/RC-160/RC-160L Remote Control Features	8
Table 4: Remote Control Configurations	10
Table 5: DIP-switch Settings	16
Table 6: Machine # DIP-switch Settings	17
Table 7: Technical Specifications of the RC-80, RC-160 and RC-160L	24
Table 8: Protocol Definitions	25
Table 9: Instruction Codes for Protocol 2000	26

1 Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront the video, audio, presentation, and broadcasting professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 1,000-plus different models now appear in 11 groups¹ that are clearly defined by function.

Congratulations on purchasing your **RC-80**, **RC-160** and/or **RC-160L** which are ideal for broadcasting studios, and presentation and industrial applications. The package includes the following items:

- **RC-80/RC-160/RC-160L Remote Controller**
- Null-modem adapter
- Windows®-based Kramer control software²
- Windows®-based Configuration Manager
- Kramer **RC-IR2** Infrared Remote Control Transmitter (including the required battery and a separate user manual³)
- This user manual³

2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual
- Use Kramer high performance high resolution cables⁴

2.1 Quick Start


This quick start chart summarizes the basic setup and operation steps.

1 GROUP 1: Distribution Amplifiers; GROUP 2: Switchers and Matrix Switchers; GROUP 3: Control Systems; GROUP 4: Format/Standards Converters; GROUP 5: Range Extenders and Repeaters; GROUP 6: Specialty AV Products; GROUP 7: Scan Converters and Sealers; GROUP 8: Cables and Connectors; GROUP 9: Room Connectivity; GROUP 10: Accessories and Rack Adapters; GROUP 11: Sierra Products

2 Downloadable from our Web site at <http://www.kramerelectronics.com>

3 Download up-to-date Kramer user manuals from our Web site at <http://www.kramerelectronics.com>

4 The complete list of Kramer cables is on our Web site at <http://www.kramerelectronics.com>

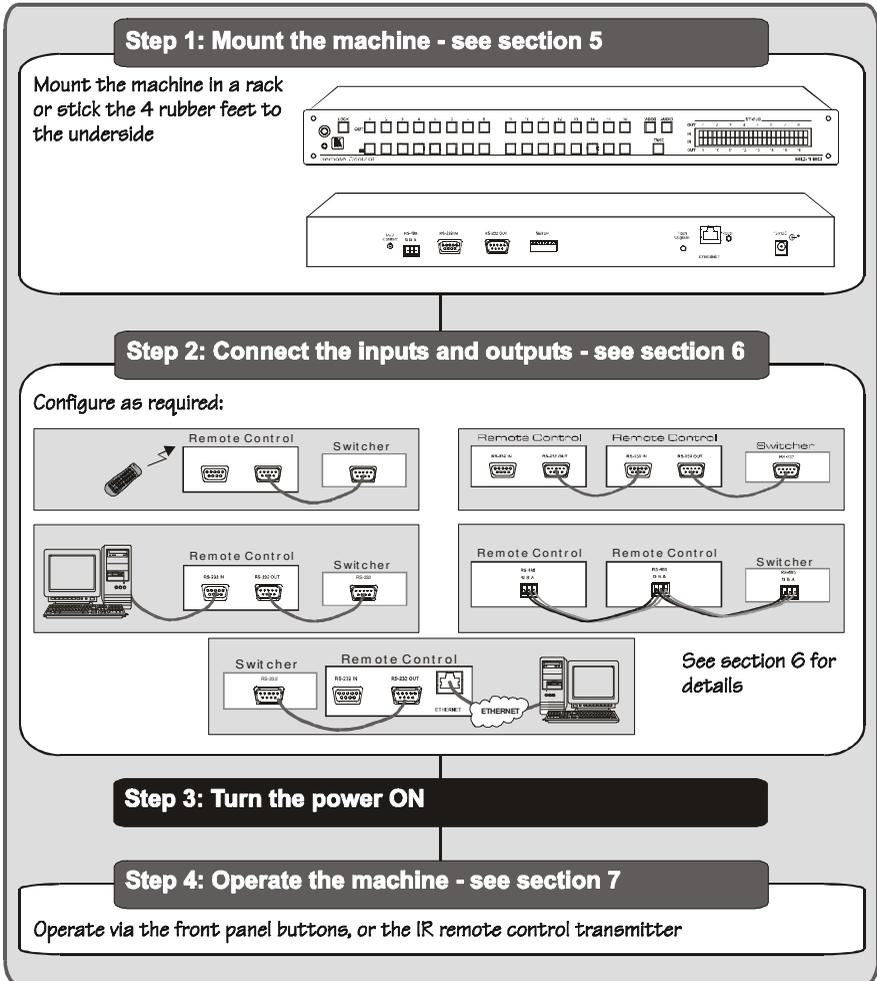

3 Overview

The Kramer **RC-80**, **RC-160** and **RC-160L** are an innovative series of master remote control units, designed for broadcasting studios and industrial applications.

The **RC-160** and **RC-160L** can access and control Kramer machines that use Protocol 2000 (for example, a switcher that has up to 16 inputs and 16 outputs).

The **RC-80** can access and control Kramer machines that use Protocol 2000 (for example, a switcher that has up to eight inputs and eight outputs). The status of the controlled switcher is monitored continuously, and shown on the display.

In particular, the *Remote Control* machines:

- Have an LCD display (for the **RC-160** and **RC-160L**) or a bright 7-segment LED display (for the **RC-80**)
- Feature two RS-232 ports (IN and OUT), an RS-485 port, an Ethernet interface, and an IR receiver
- Include Audio-follow-video and breakaway options
- Have a TAKE button, for confirming actions
- Include a LOCK button to prevent tampering with the front panel
- Receive their power from a 12V DC source, making them ideal also for field operation

Control the **RC-80/RC-160/RC-160L** using the front panel buttons, or remotely via:

- RS-485 or RS-232 serial commands transmitted by a touch screen system, PC, or other serial controller
- The Kramer infrared remote control transmitter
- The Ethernet

The **RC-80/RC-160** is dependable, rugged, and fits into one vertical space (1U) of a standard 19” professional rack. The **RC-160L** fits into two vertical spaces (2U) of a standard 19” professional rack.

To achieve the best performance:

- Connect only good quality connection cables, thus avoiding interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Avoid interference from neighboring electrical appliances that may adversely influence signal quality and position your Kramer *Remote Control* machine away from moisture, excessive sunlight and dust



Caution – No operator-serviceable parts inside unit.

Warning – Use only the Kramer Electronics input power wall adapter that is provided with this unit¹.

Warning – Disconnect power and unplug unit from wall before installing or removing device or servicing unit.

¹ For example: model number AD2512C, part number 2535-000251

3.1 Terminology Used in this User Manual

Table 1 defines some terms that are used in this user manual.

Table 1: Terminology Used in this User Manual

Term	Definition
802.3	The standard specification for ETHERNET that is maintained by the Institute of Electrical and Electronics Engineers (IEEE).
Dynamic Host Configuration Protocol (DHCP)	Allows the network administrator to distribute IP addresses from a central point and automatically send a new IP address when an Ethernet point is plugged into a different network location.
Gateway	A network position serving as an entry to another network. On the Internet, a node or stopping point can be either a gateway node or a host (end-point) node.
IP Address	A 32-binary digit number that identifies each sender or receiver (within a network via a particular server or workstation) of data (HTML pages or e-mails) that is sent in packets across the Internet. Every device connected to an IP network must have a unique IP address. This address is used to reference the specific unit.
Local Area Network (LAN)	Computers sharing a common communications line or wireless link, which often share a server within a defined geographic area.
Media Access Control (MAC) Address	A computer's unique hardware number (or address) in a LAN or other network. On an Ethernet LAN, the (MAC) address is identical to the Ethernet address.
Transmission Control Protocol/Internet Protocol (TCP/IP)	The basic communication language or protocol of the Internet that breaks the message into appropriately sized packets for the network, and can be used as a communications protocol in an intranet or an extranet.

4 Your RC-80, RC-160 and RC-160L Remote Control Machines

This section defines each of the Remote Control machines:

- Figure 1 illustrates the **RC-80** Remote Control
- Figure 2 illustrates the **RC-160** Remote Control
- Figure 3 illustrates the **RC-160L** Remote Control

Table 2 and Table 3 define the *Remote Control* machines¹.

¹ Some items, which appear in the table, do not appear in the illustrations since they are not included in that specific machine

Your RC-80, RC-160 and RC-160L Remote Control Machines

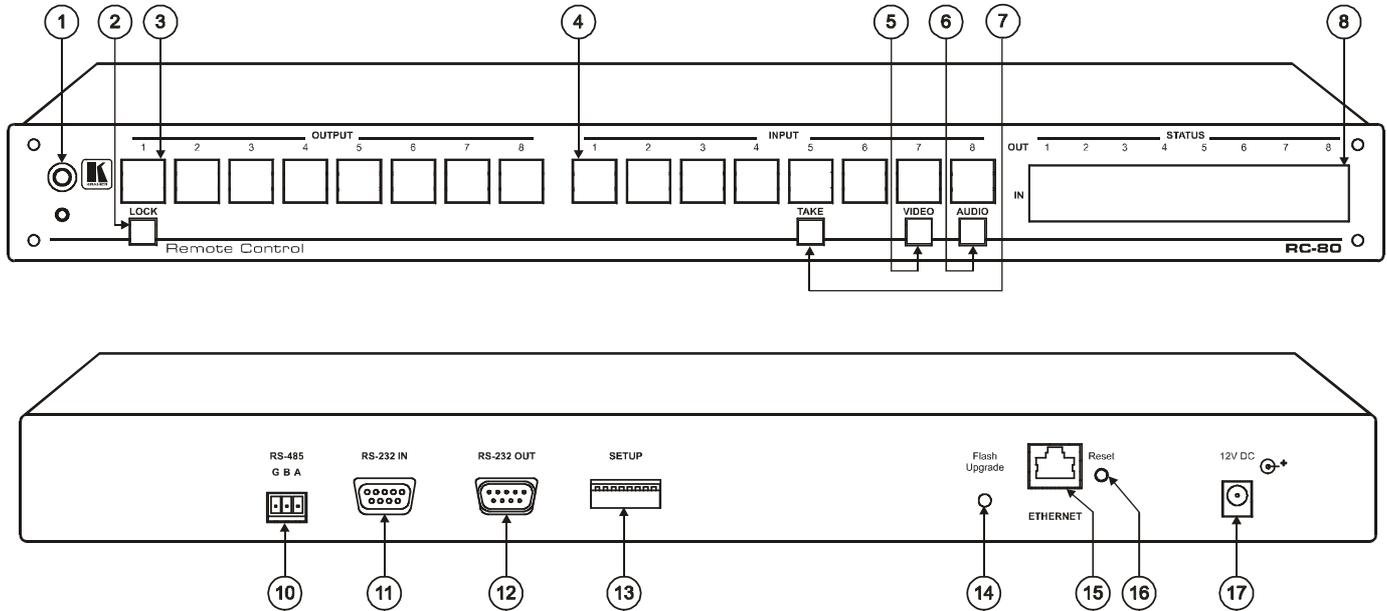


Figure 1: RC-80 Remote Control¹

¹ Item 9, which appears in Table 3 is not included in this machine

Your RC-80, RC-160 and RC-160L Remote Control Machines

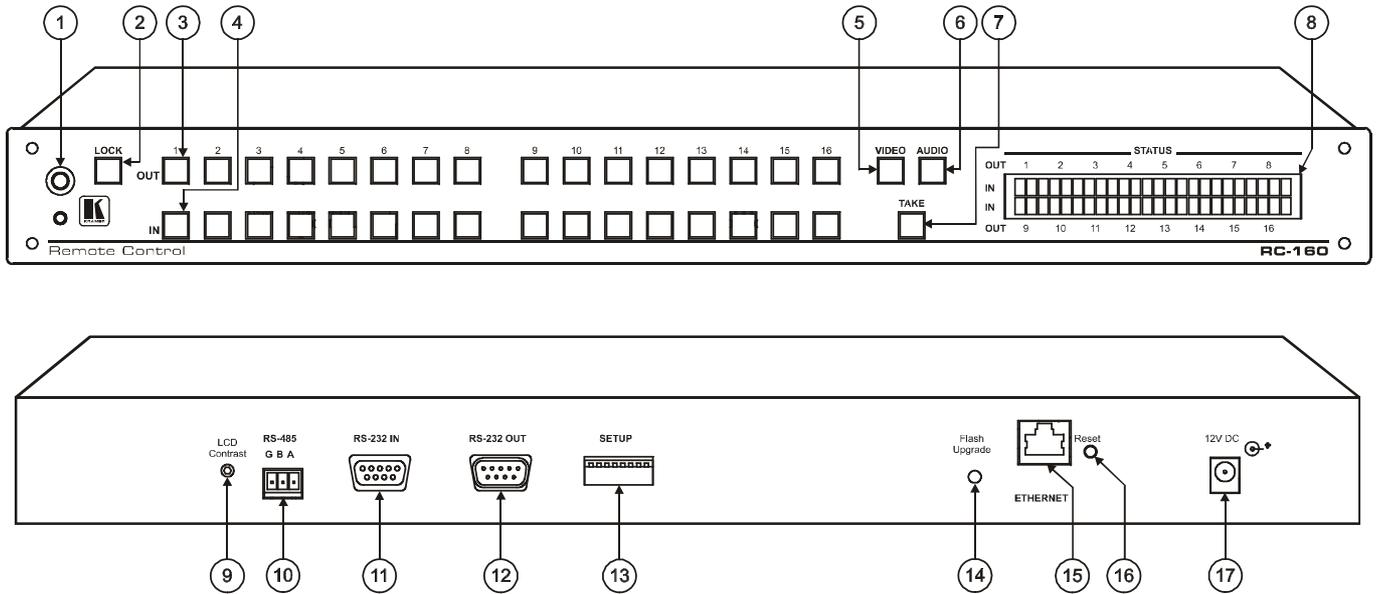


Figure 2: RC-160 Remote Control

Your RC-80, RC-160 and RC-160L Remote Control Machines

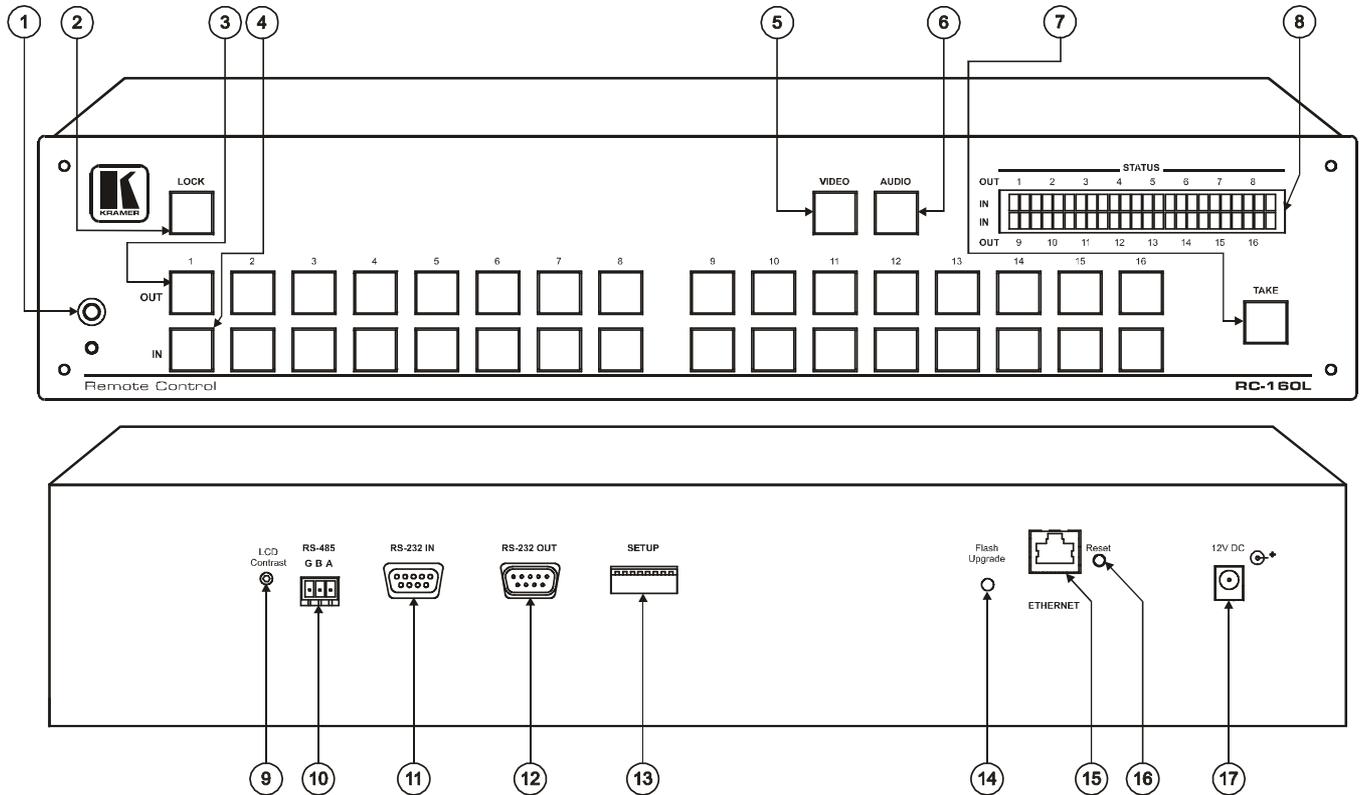


Figure 3: RC-160L Remote Control

Table 2: Front Panel RC-80/RC-160/RC-160L Remote Control Features

#	Feature	Function		
		RC-80	RC-160	RC-160L
1	IR Receiver	The red LED is illuminated when receiving signals from the Infra-red remote control transmitter		
2	LOCK Button	Disengages the front panel switches		
3	OUT / OUTPUT SELECTOR Buttons ¹	Select the output to which the input is to be routed		
		From 1 to 8	From 1 to 16	From 1 to 16
4	IN / INPUT SELECTOR Buttons ¹	Select the input to switch to the output		
		From 1 to 8	From 1 to 16	From 1 to 16
5	VIDEO Button	When button illuminates, actions relate to video ² . Press to toggle		
6	AUDIO Button	When button illuminates, actions relate to audio ² . Press to toggle		
7	TAKE Button	When in the Confirm mode, press to implement a single action. Press to toggle between Confirm and At Once mode		
8	STATUS Display	Displays the selected input switched to the output (marked above/below each input)		
		7-segment LED	LCD	LCD

Table 3: Rear Panel RC-80/RC-160/RC-160L Remote Control Features

#	Feature	Function		
		RC-80	RC-160	RC-160L
9	LCD Contrast Trimmer	Not applicable	Turn to adjust LCD contrast ³	
10	RS-485 Terminal Block Port	Pins B (-) and A (+) are for RS-485; Pin G (Ground) may be connected to the shield of the cable if desired		
11	RS-232 IN 9-pin D-sub Port	Connects to the PC or to another Remote Control		
12	RS-232 OUT 9-pin D-sub Port	Connects to a Kramer switcher or another Remote Control		
13	SETUP DIP-switches	See section 6.4		
14	Flash Upgrade Button	Push in for "Program" to upgrade to the latest Kramer firmware (see section 8), or release for "Normal" (the factory default)		
15	ETHERNET Connector	Connects to the PC through computer networking (see section 6.2)		
16	Reset Button	ETHERNET factory reset button. Press to reset to factory default definitions ⁴ : IP number – 192.168.139 Mask – 255.255.255.0 Gateway – 192.168.11		
17	12V DC	+12V DC connector for powering the unit		

1 The RC-80 and RC-160L have large buttons, and the RC-160 has small buttons

2 Press both VIDEO and AUDIO buttons (both buttons illuminate) for the audio channels to follow the video channels (AFV, audio-follow-video mode)

3 Insert a screwdriver into the hole and carefully rotate it, to trim the level

4 First disconnect the power adapter and then connect it again while pressing the Reset button. The unit will power up and load its memory with the factory default definitions

5 Installing in a Rack

This section describes what to do before installing in a rack and how to rack mount.

Before Installing in a Rack

Before installing in a rack, be sure that the environment is within the recommended range:	
Operating temperature range	+5° to +45° C (41° to 113° F)
Operating humidity range	10 to 90% RHL, non-condensing
Storage temperature range	-20° to +70° C (-4° to 158° F)
Storage humidity range	5 to 95% RHL, non-condensing



CAUTION!!


When installing in a 19" rack, avoid hazards by taking care that:

1. It is located within the recommended environmental conditions, as the operating ambient temperature of a closed or multi unit rack assembly may exceed the room ambient temperature.
2. Once rack mounted, enough air will still flow around the machine.
3. The machine is placed straight in the correct horizontal position.
4. You do not overload the circuit(s). When connecting the machine to the supply circuit, overloading the circuits might have a detrimental effect on overcurrent protection and supply wiring. Refer to the appropriate nameplate ratings for information. For example, for fuse replacement, see the value printed on the product label.
5. The machine is earthed (grounded) in a reliable way and is connected only to an electricity socket with grounding. Pay particular attention to situations where electricity is supplied indirectly (when the power cord is not plugged directly into the socket in the wall), for example, when using an extension cable or a power strip, and that you use only the power cord that is supplied with the machine.

How to Rack Mount

To rack-mount a machine:

1. Attach both ear brackets to the machine. To do so, remove the screws from each side of the machine (3 on each side), and replace those screws through the ear brackets.

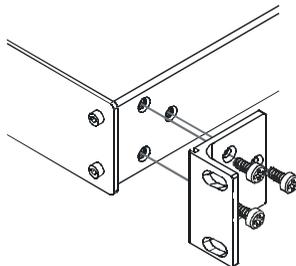

2. Place the ears of the machine against the rack rails, and insert the proper screws (not provided) through each of the four holes in the rack ears.

Note that:

- In some models, the front panel may feature built-in rack ears
- Detachable rack ears can be removed for desktop use
- Always mount the machine in the rack before you attach any cables or connect the machine to the power
- If you are using a Kramer rack adapter kit (for a machine that is not 19"), see the Rack Adapters user manual for installation instructions (you can download it at: <http://www.kramerelectronics.com>)

6 Connecting the Remote Control Machine

The **RC-160** Remote Control¹ can be connected in several configurations, as defined in Table 4:

Table 4: Remote Control Configurations

<p>1 The Remote Control² is connected to the switcher via the RS-232 ports³</p>	
<p>2 Two or more Remote Control machines are connected in series to the switcher via the RS-232 ports³</p>	
<p>3 A PC is directly connected to the Remote Control, which is connected to the switcher⁴ via the RS-232 ports³</p>	
<p>4 A PC is connected to the Remote Control via the Ethernet, and the Remote Control is connected to the switcher⁴ via the RS-232 ports³</p>	
<p>5 One or more Remote Control machines are connected to the switcher via the RS-485 terminal block connectors</p>	

1 From this section on, all the information is relevant to the RC-80, RC-160 and RC-160L, unless noted otherwise

2 The remote control can be operated either directly using the front panel buttons or via the IR transmitter controller. The commands are translated to the switcher via RS-232 or RS-485

3 A null-modem adapter is required when connecting via RS-232

4 Or to another remote control connected in series

This section describes how to connect:

- The Remote Control rear panel (see section 6.1)
- A switcher, an additional controller and/or a PC via the RS-232 ports (see section 6.1.1)
- A PC via the Ethernet (see section 6.2) and configure the Ethernet port (see section 6.3)
- Several Remote Control machines via RS-485 (see section 6.4)

To set the DIP-switches, see section 6.5

6.1 Connecting the Remote Control Rear Panel

To connect the **RC-160 Remote Control** as illustrated in the example in Figure 4, do the following:

1. Connect the A/V sources and acceptors, as required, to the Kramer switcher that is to be controlled.
2. Connect the RS-232 OUT port on the first¹ **RC-160** machine to the RS-232 port of a Kramer switcher (for example, the Kramer **VS-1616V** switcher), **using a null modem adapter**³.
3. If required, connect the RS-232 OUT port on a second² **RC-160** machine, to the RS-232 IN port of the first¹ **RC-160** machine, **using a null modem adapter**³.
4. If required, connect a PC to the RS-232 IN port of the second² **RC-160** machine⁴.
5. Turn on the power in the following order:
 - The sources and acceptors on the Kramer switcher
 - The Kramer switcher
 - The *Remote Control* nearest to the switcher (the first unit in this example)
 - The *Remote Control* further on the line (the second unit in this example)
6. Set the machine # to 1 on the controllers and the switcher (see section 6.5).

1 The remote control connected to the switcher

2 The remote control further away from the switcher

3 See section 6.1.1

4 Or to the Remote Control that is the furthest away from the switcher. For example, if only one Remote Control is connected to the switcher, connect the PC to this Remote Control; if three Remote Control machines are connected to the switcher, connect the PC to the third Remote Control in the line

Connecting the Remote Control Machine

When controlling via RS-232, set the machine # to 1 on each machine (the controllers and the switcher)

The STATUS display on both the remote control panels illuminate and after a few seconds will show the status of the connected switcher.

If a “**No Communication**” message appears, refer to section 7.1.

After the system is connected and powered, run the Windows®-based Kramer control software on your PC¹

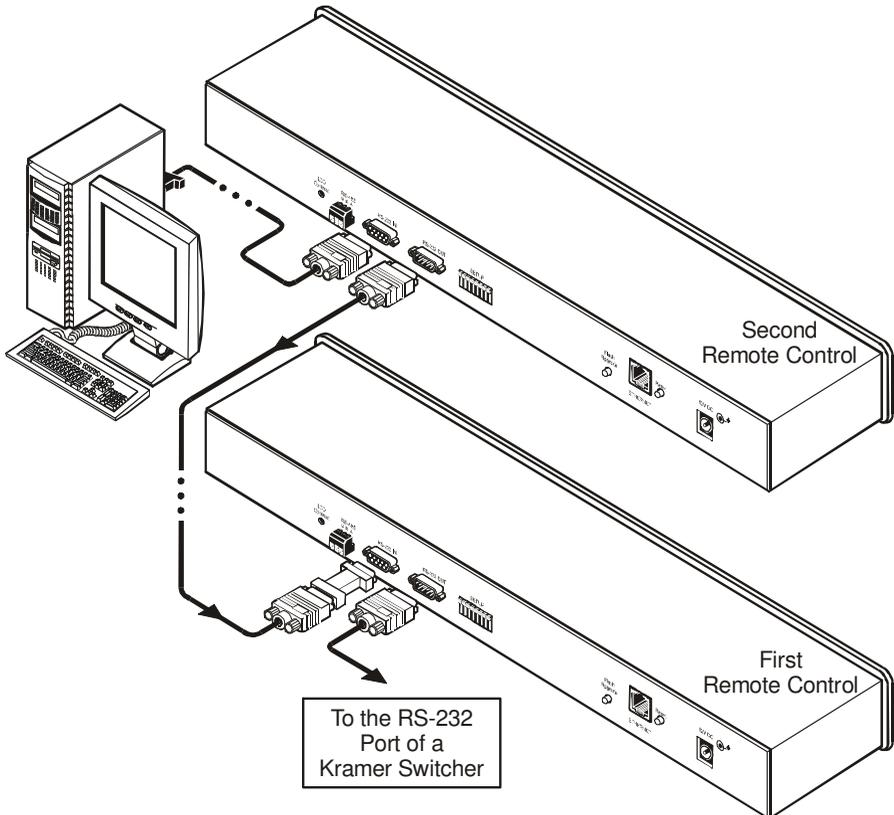


Figure 4: Connecting the RC-160 Remote Control²

¹ If the PC was connected

² The dotted lines indicate an optional connection

6.1.1 Connecting via RS-232

To connect a device¹ to the *Remote Control* unit, using the Null-modem adapter provided with the machine (recommended):

- Connect the RS-232 9-pin D-sub rear panel port on your **RC-160** unit to a 9-wire flat cable
- Connect the 9-wire flat cable to the Null-modem adapter
- Connect the Null-modem adapter to the RS-232 9-pin D-sub port on the device¹

To connect a device¹ to the **RC-160** unit, without using a Null-modem adapter:

- Connect the RS-232 9-pin D-sub port on your device to the RS-232 9-pin D-sub rear panel port on the Master **RC-160** unit, as Figure 5 illustrates

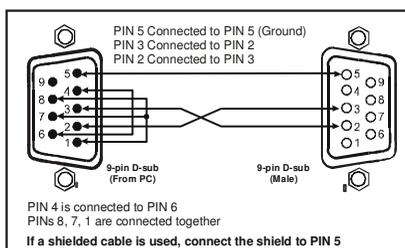


Figure 5: Connecting a Device without using a Null-modem Adapter

6.2 Controlling via ETHERNET

You can connect the **RC-160** via the Ethernet, using a crossover cable (see section 6.2.1) for direct connection to the PC or a straight through cable (see section 6.2.2) for connection via a network hub or network router.

6.2.1 Connecting the ETHERNET Port directly to a PC (Crossover Cable)

You can connect the Ethernet port of the **RC-160** to the Ethernet port on your PC, via a crossover cable with RJ-45 connectors.

This type of connection is recommended for identification of the factory default IP Address of the **RC-160** during the initial configuration

After connecting the Ethernet port, configure your PC as follows:

1. Right-click the My Network Places icon on your desktop.
2. Select **Properties**.

¹ A PC, an additional remote control, or a switcher

3. Right-click Local Area Connection Properties.
4. Select **Properties**.
The Local Area Connection Properties window appears.
5. Select the Internet Protocol (TCP/IP) and click the **Properties** Button (see Figure 6).

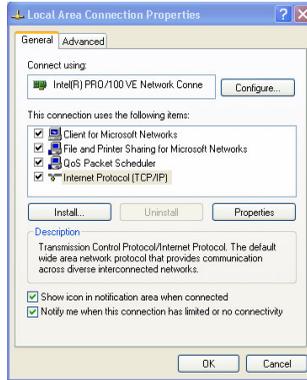


Figure 6: Local Area Connection Properties Window

6. Select Use the following IP address, and fill in the details as shown in Figure 7.
7. Click **OK**.

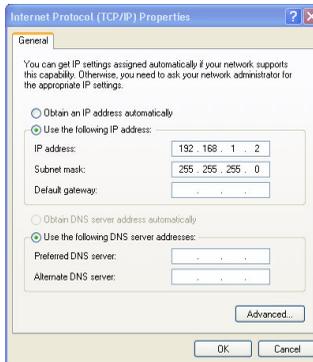


Figure 7: Internet Protocol (TCP/IP) Properties Window

6.2.2 Connecting the ETHERNET Port via a Network Hub (Straight-Through Cable)

You can connect the Ethernet port of the **RC-160** to the Ethernet port on a network hub or network router, via a straight-through cable with RJ-45 connectors.

6.3 Configuring the Ethernet Port

After connecting the Ethernet port, you have to install and configure it. For detailed instructions on how to install and configure your Ethernet port, see the “Ethernet Configuration (FC-11) guide.pdf” on our Web site:
<http://www.kramerelectronics.com>

6.4 Controlling via RS-485

You can connect several *Remote Control* units and a Kramer switcher, via the RS-485 port. For example, connect two remote control units and a Kramer switcher via the RS-485 port, as illustrated in Figure 8.

When controlling via RS-485:

- Set the RS-485 Line Termination on the first and last machines in the line¹
- Set the same machine number on each machine² (the controllers and the switcher), according to Table 6 in section 6.5. Do not set to machine #1

To connect two **RC-160** units to a Kramer Switcher, do the following:

1. Connect the RS-485 terminal block port on the first **RC-160** to the RS-485 port on the second **RC-160** unit, as follows:
 - Connect the “A” (+) PIN on the RS-485 rear panel port of the first **RC-160** to the “A” (+) PIN on the RS-485 rear panel port of the second **RC-160** unit
 - Connect the “B” (-) PIN on the RS-485 rear panel port of the first **RC-160** to the “B” (-) PIN on the RS-485 rear panel port of the second **RC-160** unit
 - When shielded twisted pair cable is used, the shield may be connected to the “G” (Ground) PIN if desired
2. Connect the second **RC-160** unit to the Kramer switcher (for example, the **VS-1616V**) in the same fashion.
3. Set the DIP-switches³ on the **RC-160** units and the switcher as follows:
 - On the first unit, set DIP 8 ON (for RS-485 Line Termination with 120Ω) and the machine # to 2 (DIP 2 ON)
 - On the second unit, set the RS-485 Line Termination to OFF (DIP 8 ON) and the machine # to 2 (DIP 2 ON)
 - On the Kramer switcher, set the RS-485 termination DIP-switch ON and set the Machine # to 2 (according to the instructions in that switcher’s user manual)

¹ For RC-160, set DIP-switch 8 to ON. For the switcher, refer to its user manual

² It is recommended to set the machine # according to the controlled switcher. In this example, the Switcher machine # was 2, so the controllers are set to machine# 2

³ In this example, the machine number is set to 2

Connecting the Remote Control Machine

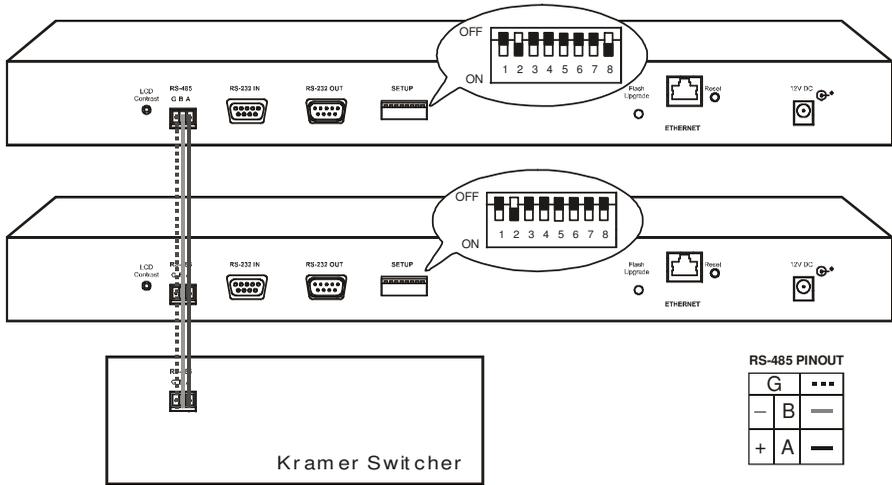


Figure 8: Controlling via RS-485

6.5 Setting the DIP-switches

By default, all DIP-switches are set to OFF. Figure 9 illustrates the RC-160 DIP-switches:

SETUP

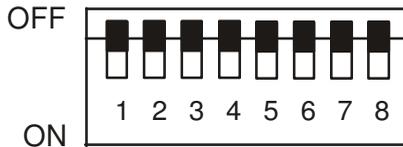


Figure 9: RC-160 DIP-switches

Table 5: DIP-switch Settings

DIPS	Function	Description
1, 2, 3, 4	Machine number	See Table 6
5, 6, 7	Reserved	Set to OFF
8	RS-485 TERM	ON for RS-485 Line Termination with 120Ω; OFF for no RS-485 Line Termination

Table 6 defines the Machine # DIP-switch settings:

Table 6: Machine # DIP-switch Settings

Mach. #	DIP 1	DIP 2	DIP 3	DIP 4
1	ON	OFF	OFF	OFF
2	OFF	ON	OFF	OFF
3	ON	ON	OFF	OFF
4	OFF	OFF	ON	OFF
5	ON	OFF	ON	OFF
6	OFF	ON	ON	OFF
7	ON	ON	ON	OFF
8	OFF	OFF	OFF	ON

Mach. #	DIP 1	DIP 2	DIP 3	DIP 4
9	ON	OFF	OFF	ON
10	OFF	ON	OFF	ON
11	ON	ON	OFF	ON
12	OFF	OFF	ON	ON
13	ON	OFF	ON	ON
14	OFF	ON	ON	ON
15	ON	ON	ON	ON

When connecting several controllers and a switcher, the machine numbers of all the units within the system should be identical.

When controlling a system via:

- RS-232, set the machine number on all units to 1 (see section 6.1)
- RS-485, set the same machine # on all units excluding #1 (see section 6.4)

If, for example, the controlled switcher is set to machine # 3, then the connected controllers should also be set to # 3

7 Operating the Remote Control Machine

This section describes how to:

- Read the display (see section 7.1) and view the current status (see section 7.1.1)
- Switch OUT-IN combinations (see 7.2)
- Confirm settings (see section 7.3)
- Choose the audio-follow-video or the breakaway feature (see section 7.4)
- Lock the front panel (see section 7.5)

7.1 Reading the Display

The input Status is displayed on LCD for the **RC-160** and **RC-160L** machines, and displayed on a 7-segment display for the **RC-80**.

Upon connecting the power to the unit, the display shows:

Kramer Electronics Ltd
Universal Remote Control

During normal operation, the display shows the inputs switched to the outputs¹, as illustrated in Figure 10:

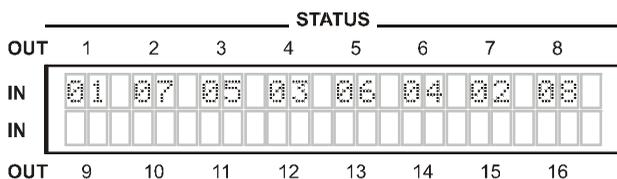


Figure 10: RC-160 Display

In case of a communication problem, the display shows:

No Communication

- Check that all units are turned ON and that the cables are properly connected
- Remember to power OFF and ON after any DIP-switch change

7.1.1 Viewing the Current Status

The **RC-160** shows the status of the last switched output by illuminating the corresponding IN and OUT buttons.

To view the current setting of an output, press the corresponding OUT button. If an input is connected to this output, the corresponding IN button will illuminate.

¹ For example, when an 8x8 switcher is connected

7.2 Switching OUT-IN Combinations

To operate the machine, enter the inputs and outputs to be connected:

- For matrices, use both the IN and the OUT keys
- For switchers (only one output) use only the IN keys

You can switch an input to an output in the At Once mode¹ or the Confirm mode¹.

To switch a video/audio input to a video/audio output in the At Once mode², do the following:

1. Press an OUT button.
The selected OUT button and the IN button, which is currently switched to that output, are illuminated.
2. Press an IN button to select the input to switch to the output.
The new IN button illuminates and the display shows the new input number, which is switched to the output.

To disconnect an input that is switched to an output, press the illuminated input button (or press any input button twice).

The input button no longer illuminates and the input is disconnected from the output.

To switch a video/audio input to a video/audio output in the Confirm mode², do the following:

1. Press an OUT button.
The selected OUT button and the IN button, which is currently switched to that output, are illuminated.
2. Press an IN button to select the input to switch to the output.
The previously selected input button is no longer illuminated, the TAKE button blinks and the display shows the newly selected input number blinking³.
3. Press the TAKE button to confirm the action.
The selected IN button illuminates, the take button illuminates and the display shows the new input that is switched to the output.

¹ See section 7.3

² See section 7.3.1 to select At Once mode/ Confirm mode

³ To abort the action, press any OUT button

7.3 Confirming Settings

You can choose to work in the At Once or the Confirm mode.

In the At Once mode (TAKE button is dim):

- Pressing an OUT-IN combination implements the switch immediately
- You save time as execution is immediate and actions require no user confirmation
- No protection is offered against changing an action in error

In the Confirm mode (TAKE button is lit):

- You can key-in an action and then confirm it by pressing the TAKE button
- Every action requires user confirmation, protecting against erroneous switching
- Execution is delayed¹ until the user confirms the action

7.3.1 Toggling between the At Once and Confirm Modes

To toggle between the At Once and Confirm modes, do the following:

1. Press the darkened TAKE button to toggle from the At Once mode (in which the TAKE button does not illuminate) to the Confirm mode (in which the TAKE button illuminates).
Actions now require user confirmation and the TAKE button illuminates.
2. Press the illuminated TAKE button to toggle from the Confirm mode back to the At Once mode.
Actions no longer require user confirmation and the TAKE button no longer illuminates.

¹ Failure to press the TAKE button within 45 seconds (the Timeout) will abort the action

7.4 Choosing the Audio-Follow-Video or Breakaway Option

You can switch stereo audio signals in one of two ways, either:

- Audio-follow-video (AFV), in which all operations relate to both the video and the audio channels; or
- Breakaway, in which video and audio channels switch independently

7.4.1 Setting the Audio-Follow-Video Option

To set the Audio-follow-video (AFV) option, press the AUDIO and VIDEO buttons¹ simultaneously.

Both the AUDIO and the VIDEO buttons illuminate and the audio will follow the video.

7.4.2 Setting the Breakaway Option

To set the Breakaway option:

Press either the AUDIO (for audio control only) or the VIDEO (for video control only) button:

- If the AUDIO button illuminates, switching operations relate to Audio
- If the VIDEO button illuminates, switching operations relate to Video

7.5 Locking the Front Panel

To prevent changing the settings accidentally or tampering with the unit via the front panel buttons, lock² your **RC-160**. Unlocking releases the protection mechanism.

To lock the **RC-160**:

- Press and hold the LOCK button until the LOCK button is illuminated
The front panel is locked. Pressing a button will have no effect

To unlock the **RC-160**:

- Press and hold the illuminated LOCK button until the LOCK button is no longer illuminated
The front panel unlocks

¹ The AUDIO and VIDEO buttons relate only to the Remote Control, they do not affect the controlled switcher. For example, if the switcher is in the audio mode and the controller is in the VIDEO mode, the Switcher's display might indicate the audio mode but the controller routes the video channels only

² Nevertheless, even though the front panel is locked you can still operate via RS-232 or RS-485, as well as via the Kramer RC-IR1 Infrared Remote Control Transmitter

8 Flash Memory Upgrade

The **RC-160** firmware is located in FLASH memory, which lets you upgrade to the latest Kramer firmware version in minutes! The process involves:

- Downloading from the Internet (see section 8.1)
- Connecting the PC to the RS-232 IN port (see section 8.2)
- Upgrading Firmware (see section 8.3)

8.1 Downloading from the Internet

You can download the up-to-date file¹ from the Internet. To do so:

1. Go to our Web site at <http://www.kramerelectronics.com> and download the file: “*JTG_RC-160.zip*” from the Technical Support section.
2. Extract the file: “*JTG_RC-160.zip*” to a folder (for example, C:\Program Files\Kramer Flash).
3. Install the JTG-Sender application.

8.2 Connecting the PC to the RS-232 IN Port

Before installing the latest Kramer firmware version on a **RC-160** unit, do the following:

1. Connect the RS-232 IN 9-pin D-sub rear panel port on the **RC-160** unit to the Null-modem adapter and connect the Null-modem adapter with a 9-wire flat cable to the RS-232 9-pin D-sub COM port on your PC (see section 6.1.1).
2. On the rear panel, push in the Flash Upgrade button (to program), using a screwdriver.
3. Connect the power on the **RC-160** unit and switch it ON.

¹ The files indicated in this section are given as an example only. The actual file names can be modified

8.3 Upgrading Firmware

Follow these steps to upgrade the firmware:

1. Double click the JTG-Sender desktop icon.
The JTG-Sender window appears (see Figure 11).

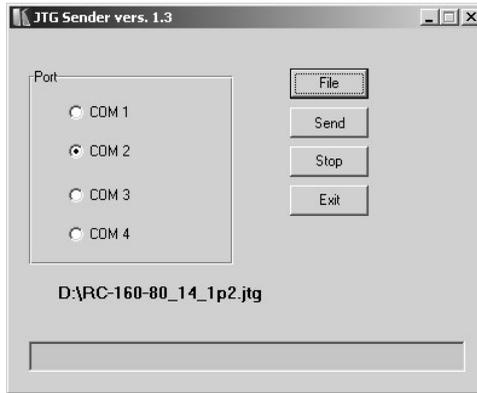


Figure 11: The JTG Sender Window

2. Select the required COM Port¹.
3. Press the File button to select the .jtg firmware file included in the package.
4. Press the Send button to download the file. The Send button lights green.
5. Wait until downloading is completed and the green Send button turns off.

¹ To which the Remote Control is connected on your PC

9 Technical Specifications

Table 7 includes the technical specifications:

Table 7: Technical Specifications¹ of the RC-80, RC-160 and RC-160L

INPUTS/OUTPUTS:	2 RS-232 9-pin D-sub IN/OUT connectors 1 RS-485 connector on detachable terminal blocks 1 Ethernet CAT 5 port
CONTROLS:	Front panel buttons, RS-232, RS-485, Ethernet and IR, LCD contrast trimmer ²
POWER SOURCE:	RC-80: 12V DC, 200mA RC-160/RC-160L: 12V DC, 130mA
DIMENSIONS:	RC-80, RC-160: 19-inch (W), 2-inch (D) 1U (H) rack-mountable RC-160L: 19-inch (W), 2-inch (D) 2U (H) rack-mountable
WEIGHT:	RC-80, RC-160: 2.7 kg (6lbs.) approx RC-160L: 3.5 kg (7.8lbs.) approx.
ACCESSORIES:	Null modem adapter, Windows®-based Kramer control software, Windows®-based Configuration Manager, Infrared remote control transmitter

¹ Specifications are subject to change without notice

² For RC-160 and RC-160L only

10 Kramer Protocol 2000¹

The **RC-80**, **RC-160**, and **RC-160L** communicate with machines controlled using Protocol 2000 (version 0.46) (below). This communication protocol uses four bytes of information as defined below. For RS-232, a null-modem connection between the machine and controller is used. The default data rate for RS-232/RS-485 is 9600 baud, with no parity, 8 data bits and 1 stop bit.

Table 8: Protocol Definitions

MSB								LSB		
		DESTINATION	INSTRUCTION							
0	D	N5	N4	N3	N2	N1	N0			
7	6	5	4	3	2	1	0			
1st byte										
		INPUT								
1	I6	I5	I4	I3	I2	I1	I0			
7	6	5	4	3	2	1	0			
2nd byte										
		OUTPUT								
1	O6	O5	O4	O3	O2	O1	O0			
7	6	5	4	3	2	1	0			
3rd byte										
		MACHINE NUMBER								
1	OVR	X	M4	M3	M2	M1	M0			
7	6	5	4	3	2	1	0			
4th byte										

1st BYTE: Bit 7 – Defined as 0.

D – “DESTINATION”: 0 - for sending information to the switchers (from the PC);

1 - for sending to the PC (from the switcher).

N5...N0 – “INSTRUCTION”

The function that is to be performed by the switcher(s) is defined by the INSTRUCTION (6 bits). Similarly, if a function is performed via the machine’s keyboard, then these bits are set with the INSTRUCTION NO., which was performed. The instruction codes are defined according to the table below (INSTRUCTION NO. is the value to be set for N5...N0).

2nd BYTE: Bit 7 – Defined as 1.

I6...I0 – “INPUT”.

When switching (ie. instruction codes 1 and 2), the INPUT (7 bits) is set as the input number which is to be switched. Similarly, if switching is done via the machine’s front-panel, then these bits are set with the INPUT NUMBER which was switched. For other operations, these bits are defined according to the table.

3rd BYTE: Bit 7 – Defined as 1.

O6...O0 – “OUTPUT”.

When switching (ie. instruction codes 1 and 2), the OUTPUT (7 bits) is set as the output number which is to be switched. Similarly, if switching is done via the machine’s front-panel, then these bits are set with the OUTPUT NUMBER which was switched. For other operations, these bits are defined according to the table.

4th BYTE: Bit 7 – Defined as 1.

Bit 5 – Don’t care.

OVR – Machine number override.

M4...M0 – MACHINE NUMBER.

Used to address machines in a system via their machine numbers. When several machines are controlled from a single serial port, they are usually configured together with each machine having an individual machine number. If the OVR bit is set, then all machine numbers will accept (implement) the command, and the addressed machine will reply.

¹ You can download our user-friendly “Software for Calculating Hex Codes for Protocol 2000” from the technical support section on our Web site at: <http://www.kramerelectronics.com>

Kramer Protocol 2000

For a single machine controlled via the serial port, always set M4...M0 = 1, and make sure that the machine itself is configured as MACHINE NUMBER = 1.

Table 9: Instruction Codes for Protocol 2000

Note: All values in the table are decimal, unless otherwise stated.

INSTRUCTION		DEFINITION FOR SPECIFIC INSTRUCTION		NOTE
#	DESCRIPTION	INPUT	OUTPUT	
0	RESET VIDEO	0	0	1
1	SWITCH VIDEO	Set equal to video input which is to be switched (0 = disconnect)	Set equal to video output which is to be switched (0 = to all the outputs)	2, 15
2	SWITCH AUDIO	Set equal to audio input which is to be switched (0 = disconnect)	Set equal to audio output which is to be switched (0 = to all the outputs)	2
3	STORE VIDEO STATUS	Set as SETUP #	0 - to store 1 - to delete	2, 3, 15
4	RECALL VIDEO STATUS	Set as SETUP #	0	2, 3, 15
5	REQUEST STATUS OF A VIDEO OUTPUT	Set as SETUP #	Equal to output number whose status is reqd	4, 3
6	REQUEST STATUS OF AN AUDIO OUTPUT	Set as SETUP #	Equal to output number whose status is reqd	4, 3
7	VIS SOURCE	Set as input # when OUTPUT byte = 6; OR set as output # when OUTPUT byte = 7; OR set as blank period (in steps of 25ms) when OUTPUT byte = 32; OR set = 0. ****	0 - No VIS (immediate) 1 - Input # 1 2 - External digital sync 3 - External analog sync 4 - Dynamic sync 5 - Inter-machine sync 6 - Input # (INPUT byte) 7 - Output # (INPUT byte) 8 - User-defined sync 32 - RGBHV seamless switching 64 - Set for delayed switch 65 - Execute delayed switch 66 - Cancel delayed switch setting	2, 5, 17, 18
8	BREAKAWAY SETTING	0	0 - audio-follow-video 1 - audio breakaway	2
		1	0 - FOLLOW mode 1 - Normal mode	15
9	VIDEO / AUDIO TYPE SETTING	0 - for video	0 - CV 4 - SDI 1 - YC 5 - CV+YC 2 - YUV 6 - VGA scaler 3 - RGBS 7 - DVI	2
		1 - for audio	O0=0 – Unbalanced audio O0=1 – Balanced audio O1=0 – Digital audio O1=1 – Analog audio O4=0, O3=0, O2=0-Mono O4=0, O3=0, O2=1-Stereo	
		2 - for VGA and DVI	1 - 640X480 2 - 800X600 3 - 1024X768	
10	REQUEST VIS SETTING	Set as SETUP #, or set to 126 or 127 to request if machine has this function	0 - VIS source 1 - Input # or output # of source 2 - Vertical sync freq (Hz)	3, 4, 6, 7
11	REQUEST BREAKAWAY SETTING	Set as SETUP #, or set to 126 or 127 to request if machine has this function	0 - Request audio breakaway setting 1 - Request "FOLLOW" setting	3, 4, 6, 15
12	REQUEST VIDEO / AUDIO TYPE SETTING	Set as SETUP #, or set to 126 or 127 to request if machine has this function	0 - for video 1 - for audio 2 - for VGA	3, 4, 6
13	SET HIGHEST MACHINE ADDRESS	0 - for video 1 - for audio	Set equal to highest machine address	2
14	REQUEST HIGHEST MACHINE ADDRESS	0 - for video 1 - for audio	0	4

Kramer Protocol 2000

INSTRUCTION		DEFINITION FOR SPECIFIC INSTRUCTION		NOTE
#	DESCRIPTION	INPUT	OUTPUT	
15	REQUEST WHETHER SETUP IS DEFINED / VALID INPUT IS DETECTED	SETUP # or Input #	0 - for checking if setup is defined 1 - for checking if input is valid	8
16	ERROR / BUSY	For invalid / valid input (i.e. OUTPUT byte = 4 or OUTPUT byte = 5), this byte is set as the input #	0 - error 1 - invalid instruction 2 - out of range 3 - machine busy 4 - invalid input 5 - valid input	9, 25
17	RESERVED	----	----	10
18	RESET AUDIO	0	0	1
19	STORE AUDIO STATUS	Set as SETUP #	0 - to store 1 - to delete	2, 3
20	RECALL AUDIO STATUS	Set as SETUP #	0	2, 3
21	SET VIDEO PARAMETER	Equal to input / output number whose video parameter is to be set (0 = all)	Set as parameter value	2, 11, 24
22	SET AUDIO PARAMETER	Equal to input / output number whose gain is to be set (0 = all)	Set as parameter value	2, 11, 24
23	INCREASE / DECREASE VIDEO PARAMETER	Equal to input / output number whose video parameter is to be increased / decreased (0 = all)	0 - increase video gain 1 - decrease video gain 2 - increase contrast 3 - decrease contrast 4 - increase brightness 5 - decrease brightness 6 - increase color 7 - decrease color 8 - increase hue 9 - decrease hue 16 - increase H-phase 17 - decrease H-phase 18 - increase V-position 19 - decrease V-position	24
24	INCREASE / DECREASE AUDIO PARAMETER	Equal to input / output number whose parameter is to be increased / decreased (0 = all)	0 - increase output 1 - decrease output 2 - increase left output 3 - decrease left output 4 - increase right output 5 - decrease right output 6 - increase input 7 - decrease input 8 - increase left input 9 - decrease left input 10 - increase right input 11 - decrease right input	24
25	REQUEST AUDIO PARAMETER	Equal to input / output number whose parameter is requested	0	6, 24
26	REQUEST VIDEO PARAMETER	Equal to input / output number whose video parameter is requested	0	6, 24
30	LOCK FRONT PANEL	0 - Panel unlocked 1 - Panel locked	0	2
31	REQUEST WHETHER PANEL IS LOCKED	0	0	16
32 to 35	RESERVED	----	----	10
40	DIRECT MEMORY SAVE	Memory address	Data	20

INSTRUCTION		DEFINITION FOR SPECIFIC INSTRUCTION		NOTE
#	DESCRIPTION	INPUT	OUTPUT	
42	AUDIO PARAMETER SETTINGS FOR INSTRUCTIONS 22, 24, 25	INPUT Bit: 10 - 0=input; 1=output 11 - Left 12 - Right	0 - Gain 1 - Bass 2 - Treble 3 - Midrange	24
43	VIDEO PARAMETER SETTINGS FOR INSTRUCTIONS 21, 23, 26	1 - Input 2 - Output	0 - video gain 1 - contrast 2 - brightness 3 - color 4 - hue 5 - H-phase 6 - V-position	24
56	CHANGE TO ASCII	0	1 - SVS protocol 2 - Generic protocol	19
57	SET AUTO-SAVE	13 - no save 14 - auto-save	0	12, 2
58	EXECUTE LOADED DATA	Set as 0, or as SETUP #.	1-Take 2-Cancel	22, 3
59	LOAD VIDEO DATA	Set equal to video input (0 = disconnect) ----- (127 = load SETUP #)	Set equal to video output (0 = to all the outputs) ----- or SETUP #	22, 23
60	LOAD AUDIO DATA	Set equal to audio input (0 = disconnect) ----- (127 = load SETUP #)	Set equal to audio output (0 = to all the outputs) ----- or SETUP #	22, 23
61	IDENTIFY MACHINE	1 - video machine name 2 - audio machine name 3 - video software version 4 - audio software version 5 - RS422 controller name 6 - RS422 controller version 7 - remote control name 8 - remote software version 9 - Protocol 2000 revision	0 - Request first 4 digits 1 - Request first suffix 2 - Request second suffix 3 - Request third suffix 10 - Request first prefix 11 - Request second prefix 12 - Request third prefix	13
62	DEFINE MACHINE	1 - number of inputs 2 - number of outputs 3 - number of setups	1 - for video 2 - for audio 3 - for SDI 4 - for remote panel 5 - for RS-422 controller	14
63	EXTENDED DATA	7 MSBs for INPUT data	7 MSBs for OUTPUT data	20

NOTES on the above table:

NOTE 1 - When the master switcher is reset, (e.g. when it is turned on), the reset code is sent to the PC. If this code is sent to the switchers, it will reset according to the present power-down settings.

NOTE 2 - These are bi-directional definitions. That is, if the switcher receives the code, it will perform the instruction; and if the instruction is performed (due to a keystroke operation on the front panel), then these codes are sent. For example, if the HEX code

01 85 88 83
was sent from the PC, then the switcher (machine 3) will switch input 5 to output 8. If the user switched input 1 to output 7 via the front panel keypad, then the switcher will send HEX codes:

41 81 87 83

to the PC.

When the PC sends one of the commands in this group to the switcher, then, if the instruction is valid, the switcher replies by sending to the PC the same four bytes that it was sent (except for the first byte, where the DESTINATION bit is set high).

NOTE 3 - SETUP # 0 is the present setting. SETUP # 1 and higher are the settings saved in the switcher's memory, (i.e. those used for Store and Recall).

NOTE 4 - The reply to a "REQUEST" instruction is as follows: the same instruction and INPUT codes as were sent are returned, and the OUTPUT is assigned the value of the requested parameter. The replies to instructions 10 and 11 are as per the definitions in instructions 7 and 8 respectively. For example, if the present status of machine number 5 is breakout setting, then the reply to the HEX code

0B 80 80 85

would be HEX codes

4B 80 81 85

NOTE 5 – For the OUTPUT byte set as 6, the VIS source is the input selected using the OUTPUT byte. Similarly, for the OUTPUT byte set as 7, the VIS source is the output selected using the OUTPUT byte. Note also, that on some machines the sync source is not software selectable, but is selected using switches, jumpers, etc!

NOTE 6 – If INPUT is set to 127 for these instructions, then, if the function is defined on this machine, it replies with OUTPUT=1. If the function is not defined, then the machine replies with OUTPUT=0, or with an error (invalid instruction code).

If the INPUT is set to 126 for these instructions, then, if possible, the machine will return the current setting of this function, even for the case that the function is not defined. For example, for a video switcher which always switches during the VIS of input #1, (and its VIS setting cannot be programmed otherwise), the reply to the HEX code

0A FE 80 81 (ie. request VIS setting, with INPUT set as 126_{dec})

would be HEX codes

4A FE 81 81 (ie. VIS setting = 1, which is defined as VIS from input #1).

NOTE 7 – Setting OUTPUT to 0 will return the VIS source setting as defined in instruction #7. Setting to 1 will return the input # or output # of the sync source (for the case where the VIS source is set as 6 or as 7 in instruction #7). Setting to 2 returns the vertical sync frequency (0 for no input sync, 50 for PAL, 60 for NTSC, 127 for error).

NOTE 8 - The reply is as in TYPE 3 above, except that here the OUTPUT is assigned with the value 0 if the setup is not defined / no valid input is detected; or 1 if it is defined / valid input is detected.

NOTE 9 - An error code is returned to the PC if an invalid instruction code was sent to the switcher, or if a parameter associated with the instruction is out of range (e.g. trying to save to a setup greater than the highest one, or trying to switch an input or output greater than the highest one defined). This code is also returned to the PC if an RS-232 instruction is sent while the machine is being programmed via the front panel. Reception of this code by the switcher is not valid.

NOTE 10 – This code is reserved for internal use.

NOTE 11 – For machines where the video and / or audio gain is programmable.

NOTE 12 - Under normal conditions, the machine's present status is saved each time a change is made. The "power-down" save (auto-save) may be disabled using this code. Note that whenever the machine is turned on, the auto-save function is set.

NOTE 13 - This is a request to identify the switcher/s in the system. If the OUTPUT is set as 0, and the INPUT is set as 1, 2, 5 or 7, the machine will send its name. The reply is the decimal value of the INPUT and OUTPUT. For example, for a 2216, the reply to the request to send the audio machine name would be (HEX codes):

7D 96 90 81 (i.e. 128_{dec}+ 22_{dec} for 2nd byte, and 128_{dec}+ 16_{dec} for 3rd byte).

If the request for identification is sent with the INPUT set as 3 or 4, the appropriate machine will send its software version number. Again, the reply would be the decimal value of the INPUT and OUTPUT - the INPUT representing the number in front of the decimal point, and the OUTPUT representing the number after it. For example, for version 3.5, the reply to the request to send the version number would be (HEX codes):

7D 83 85 81 (i.e. 128_{dec}+ 3_{dec} for 2nd byte, 128_{dec}+ 5_{dec} for 3rd byte).

If the OUTPUT is set as 1, then the ASCII coding of the lettering following the machine's name is sent. For example, for the VS-7588YC, the reply to the request to send the first suffix would be (HEX codes):

7D D9 C3 81 (i.e. 128_{dec}+ ASCII for "Y"; 128_{dec}+ ASCII for "C").

NOTE 14 - The number of inputs and outputs refers to the specific machine which is being addressed, *not* to the system. For example, if six 16X16 matrices are configured to make a 48X32 system (48 inputs, 32 outputs), the reply to the HEX code

3E 82 81 82 (ie. request the number of outputs)

would be HEX codes

7E 82 90 82

ie. 16 outputs

NOTE 15 – When the OVR bit (4th byte) is set, then the "video" commands have universal meaning. For example, instruction 1 (SWITCH VIDEO) will cause all units (including audio, data, etc.) to switch. Similarly, if a machine is in "FOLLOW" mode, it will perform any "video" instruction.

NOTE 16 - The reply to the "REQUEST WHETHER PANEL IS LOCKED" is as in NOTE 4 above, except that here the OUTPUT is assigned with the value 0 if the panel is unlocked, or 1 if it is locked.

NOTE 17 – For clean switching of RGBHV video, the "seamless switching" option may be used. The blanking period for the transition of the RGB sources may be set in this case, in steps of 25 milliseconds.

For example, to set for 350ms blanking time (14 steps), send HEX codes

07 8E A0 81

NOTE 18 – Delayed execution allows switching after a delay dictated by RS-232. To do this, the user sends instruction 7 with the “Set for delayed switch” option (64_{dec}) before sending the switch command (instruction 1) or pressing via front panel. The switch is not executed (unless timed-out) until the “Execute delayed switch” code is sent, or the “Set for delayed switch” code is sent again. (The mode is automatically cancelled after implementation of the switch if the “execute” command is used).

For example, to connect input 4 to output 3 after a delay, send HEX codes

07	80	C0	81	(set for delayed switch)
01	84	83	81	(switch code)

then, after the required delay, send HEX codes

07	80	C1	81	(execute delayed switch)
----	----	----	----	--------------------------

to implement the switch.

NOTE 19 – After this instruction is sent, the unit will respond to the ASCII command set defined by the OUTPUT byte. The ASCII command to operate with the HEX command set must be sent in order to return to working with HEX codes.

NOTE 20 – When data (ie. the INPUT and/or OUTPUT bytes) of more than 7 bits is required, this instruction is sent before sending the instruction needing the additional bits. The data in this instruction then becomes the Most Significant Bits of that next instruction. For example, to set the audio gain (instruction 22) of output 3 to 681_{dec} (2A9_{hex}), you would first send HEX codes

	3F	80	85	81
--	----	----	----	----

and then send HEX codes

	16	83	A9	81.
--	----	----	----	-----

To set the audio gain of output 6 to 10013_{dec} (271D_{hex}), first send HEX codes

	3F	80	CE	81
--	----	----	----	----

followed by HEX codes

	16	86	9D	81.
--	----	----	----	-----

NOTE 21 – To store data in the non-volatile memory of the unit, eg. the EEPROM for saving SETUPS. The EEPROM address is sent using the INPUT byte, and the data to be stored is sent using the OUTPUT byte. To use this instruction, it is necessary to understand the memory map, and memory structure of the particular machine.

NOTE 22 – Instruction 59 and instruction 60 load data for sending to the crosspoint switcher (or for storing in a SETUP), ie. the data is “lined-up” to be executed later. Instruction 58 executes the loaded data.

NOTE 23 – If the INPUT byte is set as 127_{dec}, then the data stored in a SETUP is loaded. The SETUP # is in the OUTPUT byte.

NOTE 24 – Further information needed in instructions 21, 22, 25 and 26, is sent using instruction 42 – which is sent prior to the instruction. For example, to request the audio gain value of right input # 9, send hex codes

	2A	84	80	81
--	----	----	----	----

and then send HEX codes

	19	89	81	81.
--	----	----	----	-----

NOTE 25 – For units which detect the validity of the video inputs, Instruction 16 will be sent whenever the unit detects a change in the state of an input (in real-time).

For example, if input 3 is detected as invalid, the unit will send the HEX codes

	10	83	84	81
--	----	----	----	----

If input 7 is detected as valid, then the unit will send HEX codes

	10	87	85	81.
--	----	----	----	-----

LIMITED WARRANTY

Kramer Electronics (hereafter *Kramer*) warrants this product free from defects in material and workmanship under the following terms.

HOW LONG IS THE WARRANTY

Labor and parts are warranted for seven years from the date of the first customer purchase.

WHO IS PROTECTED?

Only the first purchase customer may enforce this warranty.

WHAT IS COVERED AND WHAT IS NOT COVERED

Except as below, this warranty covers all defects in material or workmanship in this product. The following are not covered by the warranty:

1. Any product which is not distributed by Kramer, or which is not purchased from an authorized Kramer dealer. If you are uncertain as to whether a dealer is authorized, please contact Kramer at one of the agents listed in the Web site www.kramerelectronics.com.
2. Any product, on which the serial number has been defaced, modified or removed, or on which the WARRANTY VOID IF TAMPERED sticker has been torn, reattached, removed or otherwise interfered with.
3. Damage, deterioration or malfunction resulting from:
 - i) Accident, misuse, abuse, neglect, fire, water, lightning or other acts of nature
 - ii) Product modification, or failure to follow instructions supplied with the product
 - iii) Repair or attempted repair by anyone not authorized by Kramer
 - iv) Any shipment of the product (claims must be presented to the carrier)
 - v) Removal or installation of the product
 - vi) Any other cause, which does not relate to a product defect
 - vii) Cartons, equipment enclosures, cables or accessories used in conjunction with the product

WHAT WE WILL PAY FOR AND WHAT WE WILL NOT PAY FOR

We will pay labor and material expenses for covered items. We will not pay for the following:

1. Removal or installations charges.
2. Costs of initial technical adjustments (set-up), including adjustment of user controls or programming. These costs are the responsibility of the Kramer dealer from whom the product was purchased.
3. Shipping charges.

HOW YOU CAN GET WARRANTY SERVICE

1. To obtain service on your product, you must take or ship it prepaid to any authorized Kramer service center.
2. Whenever warranty service is required, the original dated invoice (or a copy) must be presented as proof of warranty coverage, and should be included in any shipment of the product. Please also include in any mailing a contact name, company, address, and a description of the problem(s).
3. For the name of the nearest Kramer authorized service center, consult your authorized dealer.

LIMITATION OF IMPLIED WARRANTIES

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

EXCLUSION OF DAMAGES

The liability of Kramer for any effective products is limited to the repair or replacement of the product at our option. Kramer shall not be liable for:

1. Damage to other property caused by defects in this product, damages based upon inconvenience, loss of use of the product, loss of time, commercial loss; or
2. Any other damages, whether incidental, consequential or otherwise. Some countries may not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from place to place.

NOTE: All products returned to Kramer for service must have prior approval. This may be obtained from your dealer.

This equipment has been tested to determine compliance with the requirements of:

EN-50081:	"Electromagnetic compatibility (EMC); generic emission standard. Part 1: Residential, commercial and light industry"
EN-50082:	"Electromagnetic compatibility (EMC) generic immunity standard. Part 1: Residential, commercial and light industry environment".
CFR-47:	FCC* Rules and Regulations: Part 15: "Radio frequency devices Subpart B Unintentional radiators"

CAUTION!

- Servicing the machines can only be done by an authorized Kramer technician. Any user who makes changes or modifications to the unit without the expressed approval of the manufacturer will void user authority to operate the equipment.
- Use the supplied DC power supply to feed power to the machine.
- Please use recommended interconnection cables to connect the machine to other components.

* FCC and CE approved using STP cable (for twisted pair products)





For the latest information on our products and a list of Kramer distributors, visit our Web site: www.kramerelectronics.com, where updates to this user manual may be found. We welcome your questions, comments and feedback.



Caution

Safety Warning:

Disconnect the unit from the power supply before opening/servicing.



Kramer Electronics, Ltd.

Web site: www.kramerelectronics.com

E-mail: info@kramerel.com

P/N: 2900-000114 REV 5